


CLASS A APPLICATION

Use the diagram to take measurements on all class A's in the designated areas. The areas being measured do not necessarily indicate exact mounting location. The levelers should however be mounted in the general area where the measurements are taken.

A. From the ground to the top of the frame in the front and rear of the coach.

B. From the ground to the floor in the front and rear of the coach.

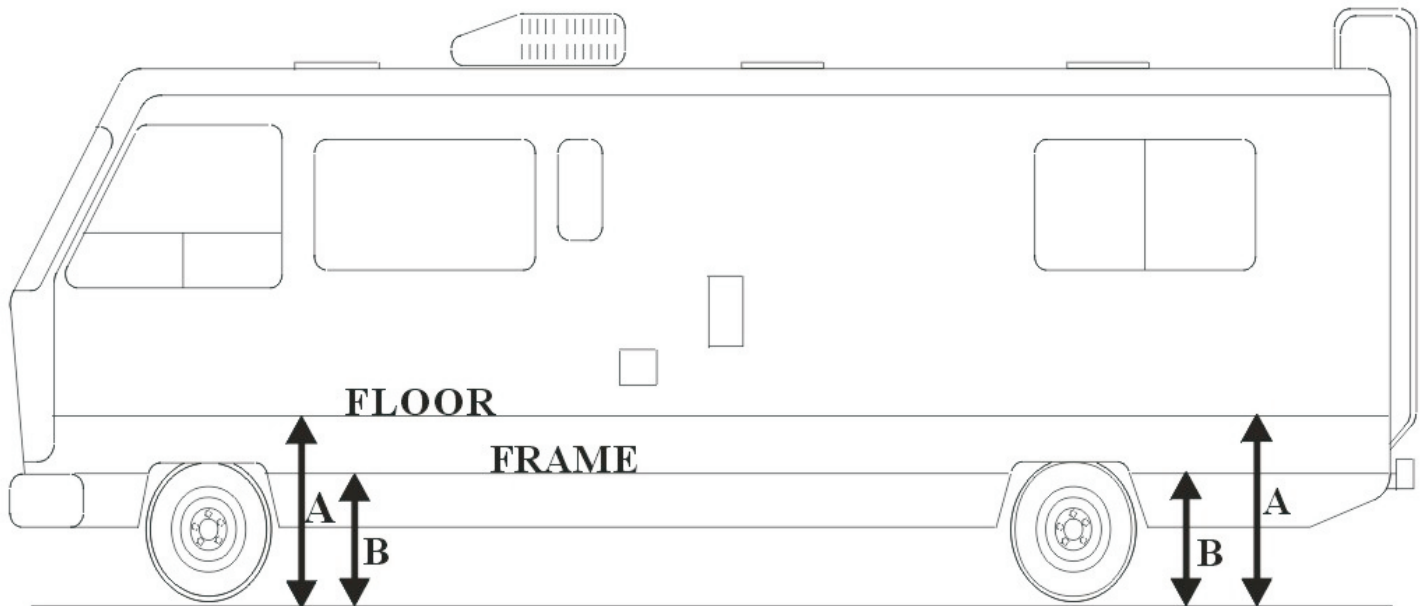

Look for any obstructions caused by compartments, generators, etc. Special cylinders can be provided to fit your application.

You must have 8" of ground clearance in the front and rear of the coach.